



Assembly Instructions



(W x D x H) 1.20m x 1.20m x 0.60m

Product Name: Alice Children's Picnic/Play Table

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS

Zest4Leisure


01352 752555 option 1 – sales@zest4leisure.co.uk

Alice Children's Picnic/Play Table Assembly Instructions

Requires 2 person assembly. Tools required: Hex Key, Hammer.

| Alice Children's Picnic/Play Table Pack List | | |
|--|--------------------|----------|
| Item | Description | Quantity |
| A | Bench Support Rail | 2 |
| B | Bench Assembly | 2 |
| C | Legs | 4 |
| D | Table Top Assembly | 1 |
| E | Table Top/Lid | 1 |

| Fixings | | |
|---------|----------|----|
| | Hex Bolt | 20 |
| | 'T' Nut | 20 |

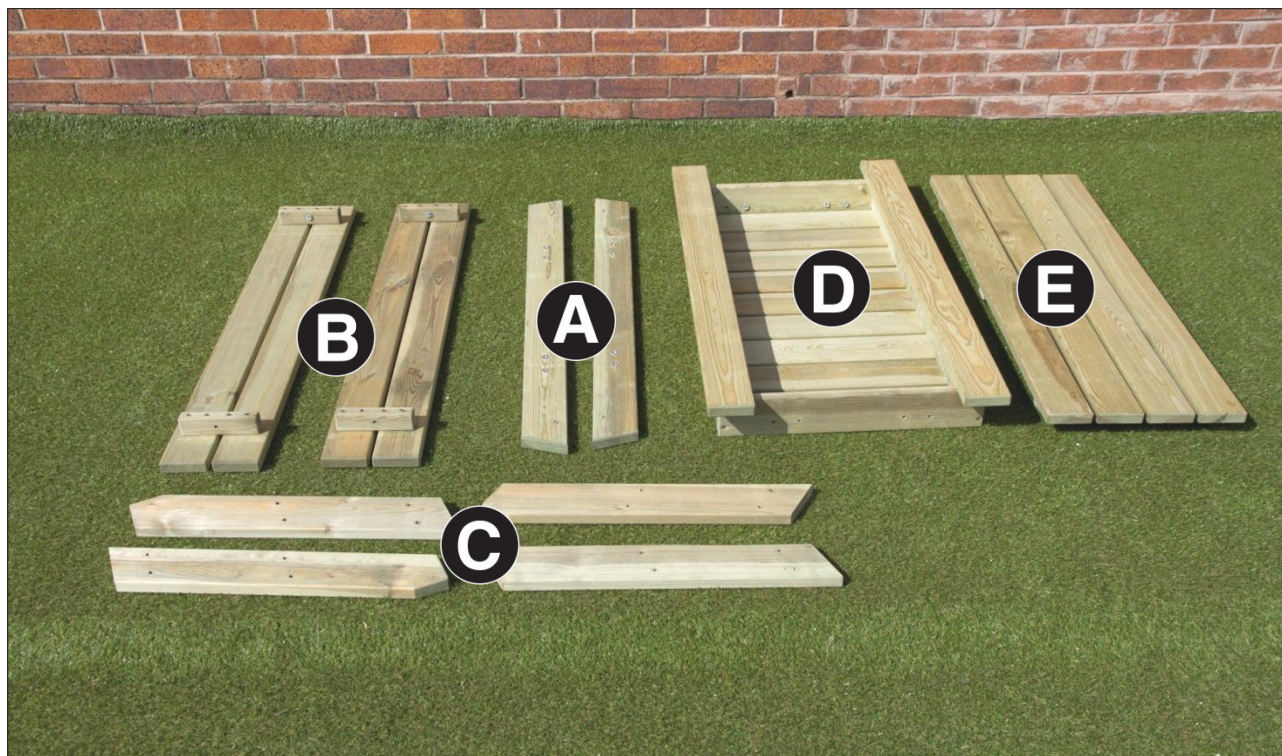

Please take a few moments to check all pack contents listed.

Assembly requires 2 persons.

Tools required: Hex Key (Supplied), Hammer.


1. Attach Bench Support Rails A to Bench Assemblies B using 4no Hex Bolts and 'T' Nuts as shown in Figs.1a & 1b.
2. Attach each Leg to Bench Support Rail using 2no Hex Bolts and 'T' Nuts per Leg ensuring Table Top bolt holes are uppermost. (Figs.2a & 2b). Do not fully tighten at this stage.
3. Invert Table Top Assembly D and place on flat surface. Position Bench/Leg assembly onto Table Top Assembly D, align bolt holes and fix in position using 8no Hex Bolts. (Figs.3a & 3b).

Fully tighten all bolts at this stage.

4. Turn assembly over and place Table Top/Lid E in position (Fig. 4).

The Alice Childrens Picnic/Play Table is now complete.

1a

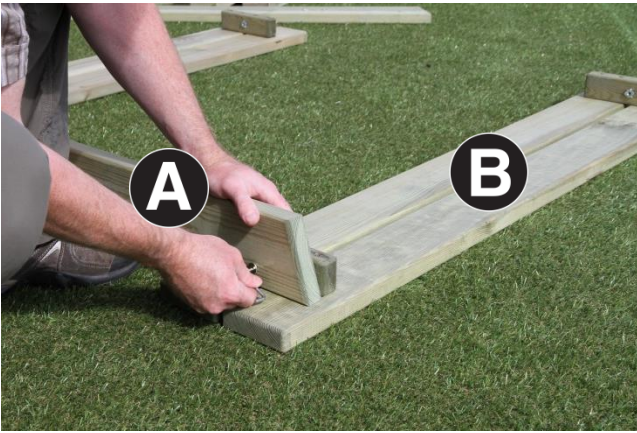


1b




2a



2b

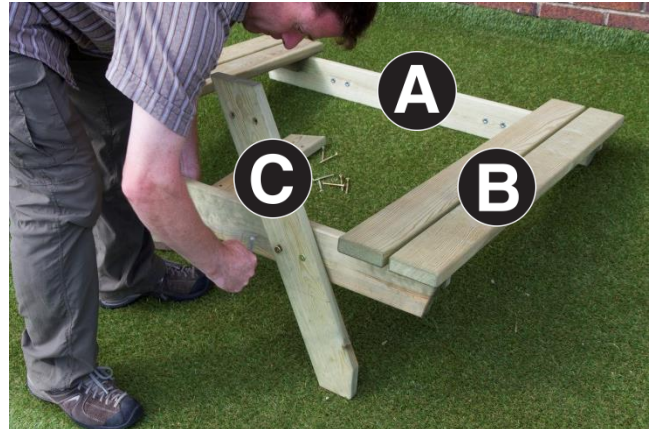

3a

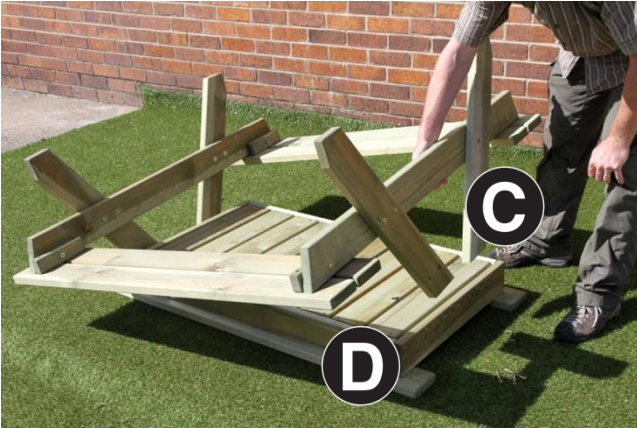

3b



4

