

Assembly Instructions



(W x D x H) 0.60m x 0.30m x 0.30m
Product Name: Bristol Rustic Wall Planter

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS


Zest4Leisure
01352 752555 option 1 – sales@zest4leisure.co.uk

Bristol Rustic Wall Planter Assembly Instructions

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.

Bristol Rustic Wall Planter Pack List		
Item	Description	Quantity
A	Side Board	2
B	Back Board	1
C	Log Panel	1

Fixings		
	60mm Screws	16

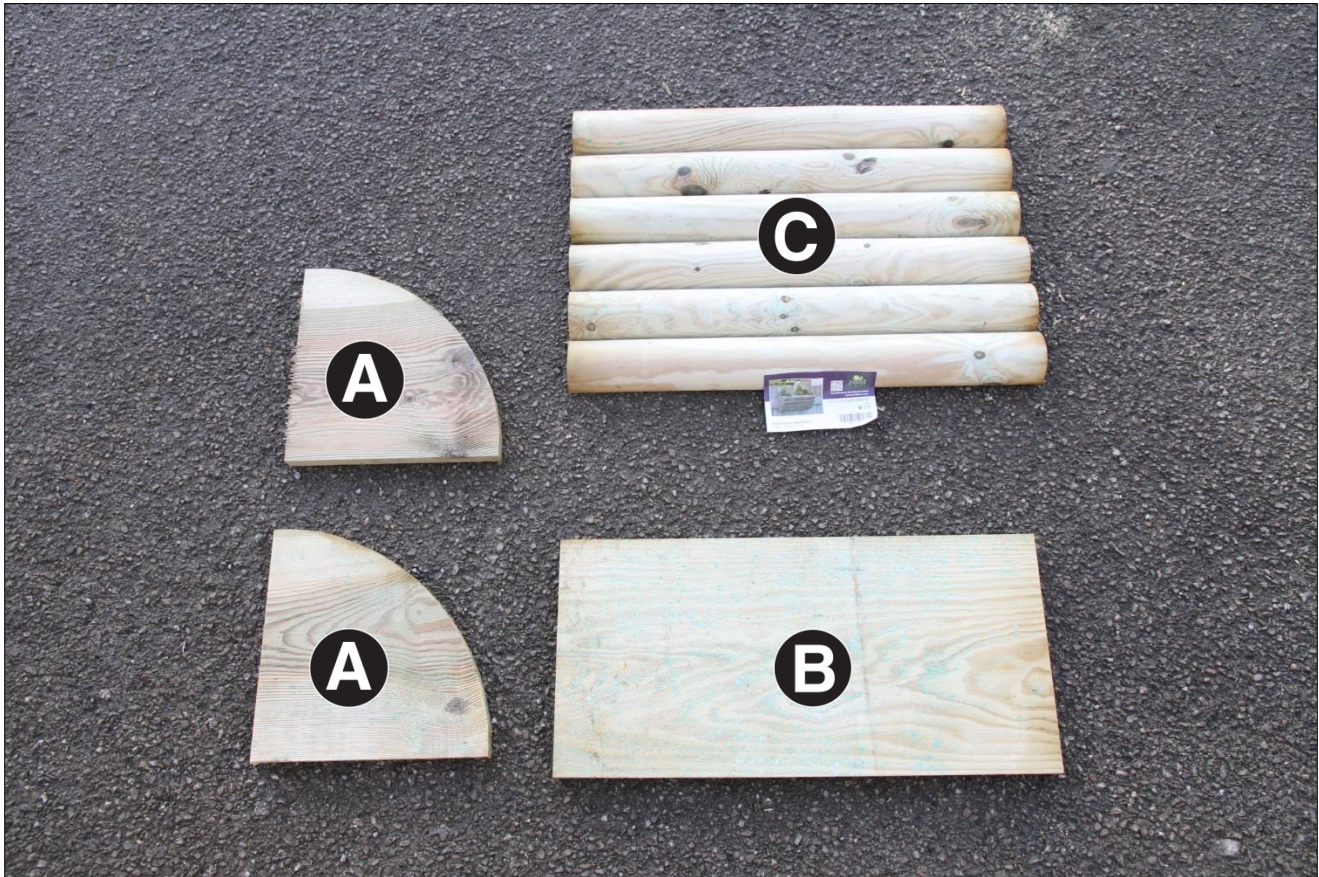


Please take a few moments to check all pack contents listed.


Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.

1. Attach Side Boards A to Back Board B using 4no Screws – 2no per side (Fig.1)
2. Position Log Panel C as shown in Fig.2 and attach to Side Boards A using 12no screws – 2 per log.

1

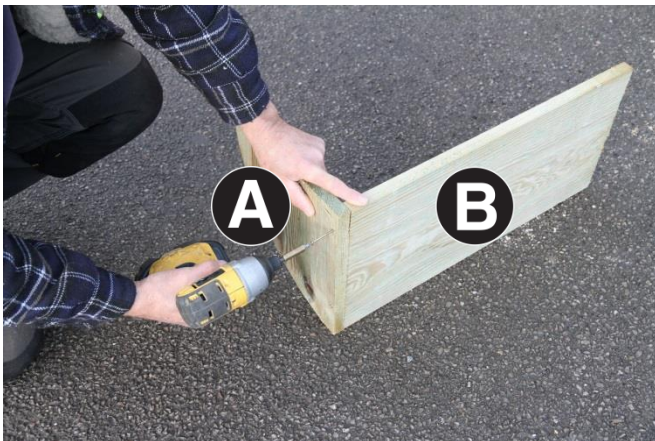

2

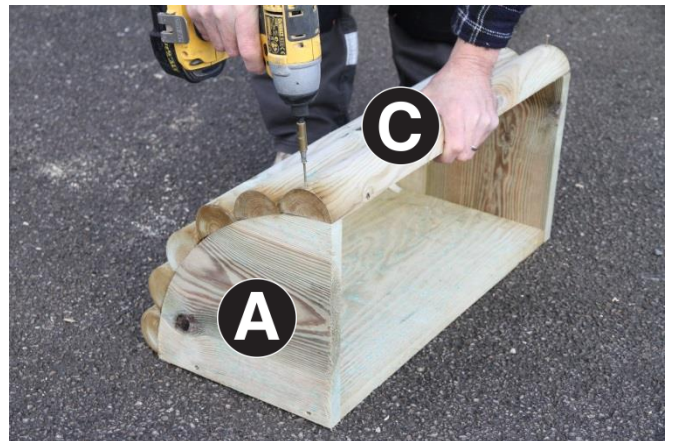

Bristol Rustic Wall Planter is now complete.