



Assembly Instructions



(W x D x H) 1.8m x 0.7m x 0.8m
Product Name: Deep Root Planter 1.8m

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS

Zest4Leisure
01352 752555 option 1 – sales@zest4leisure.co.uk


Deep Root Planter 1.8m Assembly Instructions

Requires 2 person assembly.

Tools required: Corded/Cordless Drill, Pozidrive Bit/Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.

Deep Root Planter 1.8m Pack List		
Item	Description	Quantity
A	End Panel	2
B	Side Panel	2
C	Base Board Support Rail	2
D	Base Board	17
E	Capping Trim	4

Fixings		
	35mm Screws	14
	45mm Screws	32

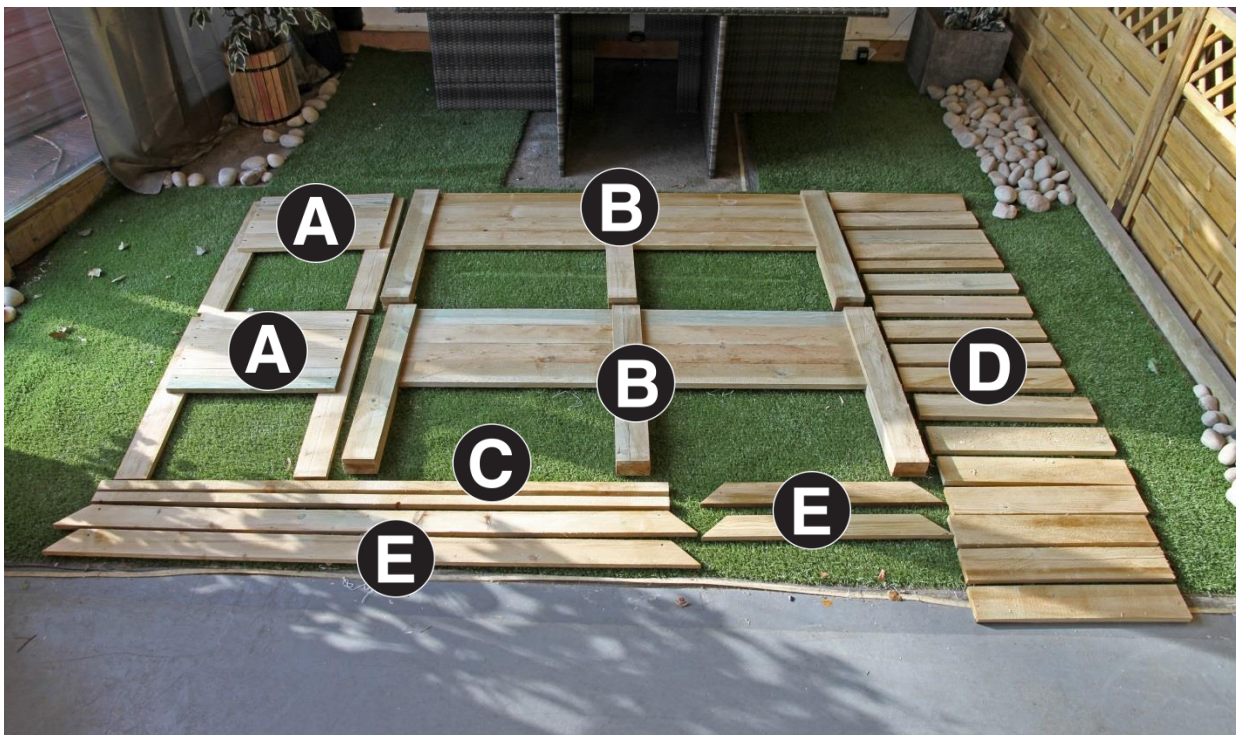

Please take a few moments to check all pack contents listed on page 1 of the Assembly Instructions.

Assembly requires 2 persons.

Tools required: Corded/Cordless Drill, Pozidrive Bit/Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.


- 1.** Attach one End Panel (A) to Side Panels (B) using 6no 45mm screws per end panel, as shown in Figs 1a & 1b. Repeat process with the second End Panel (A) as shown in Fig 1c.
- 2.** Attach Base Board Support Rails (C) to base of Side Panels using 14no 35mm screws (7no per side) as shown in Figs 2a & 2b.
- 3.** Loose fit ALL Base Boards (D) as shown in Fig 3a. A minimum of four central boards to be screwed down to Base Board Support Rails using 45mm screws. See Fig 3b.
- 4.** Set out the 4no Capping Trims (E) on top of the planter and attach using the 12no 45mm screws (2no screws per short trim and 4no per long trim). See Figs 4a & 4b.

The Deep Root 1.8m is now complete.


1a




1c

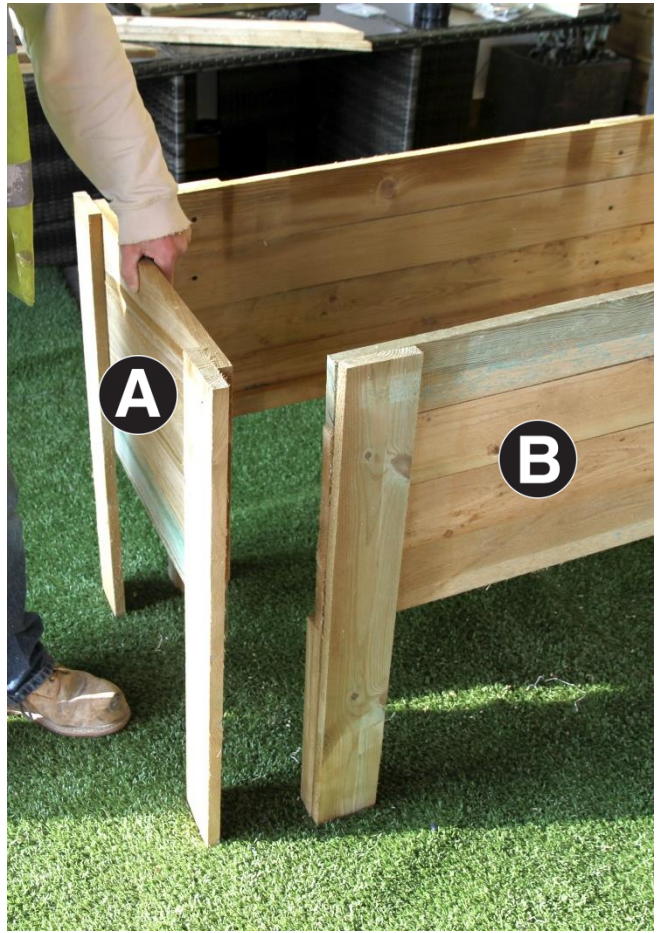

1b

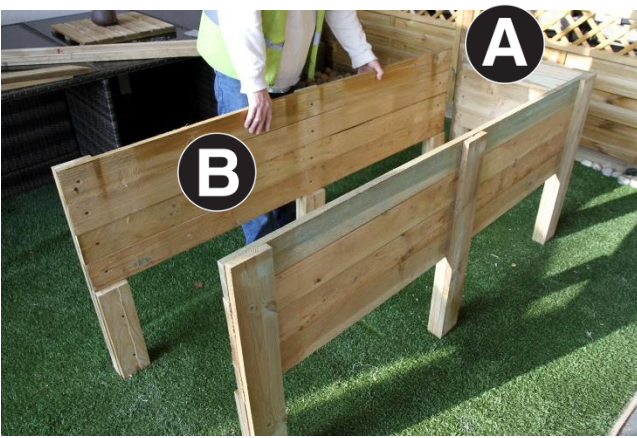

2a

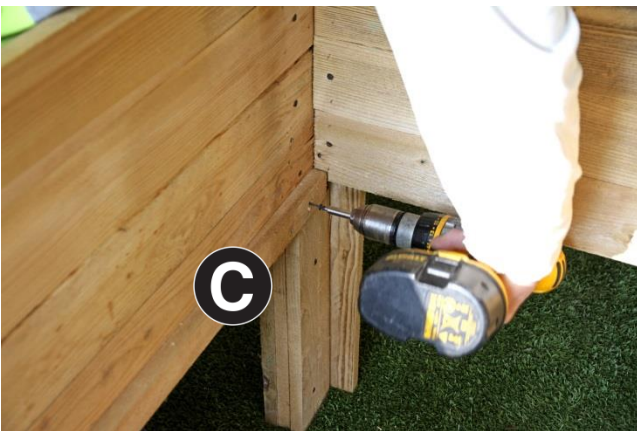

2b



3a



3b



4a



4b

