

Assembly Instructions



(W x D x H) 1.40m x 0.60m x 2.80m

Product Name: Katja Arch

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS

Zest4Leisure

01352 752555 option 1 – sales@zest4leisure.co.uk


Katja Arch Assembly Instructions

Requires 2 person assembly.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, Tape Measure.
3mm Drill Bit required in order for you to drill all screw holes before construction.

Katja Arch Pack List		
Item	Description	Quantity
A	Arch Section	4
B	Dowel Rod	6
C	Board	4
D	Post Assembly	2

Fixings		
	50mm Screws	24
	25mm Screws	6

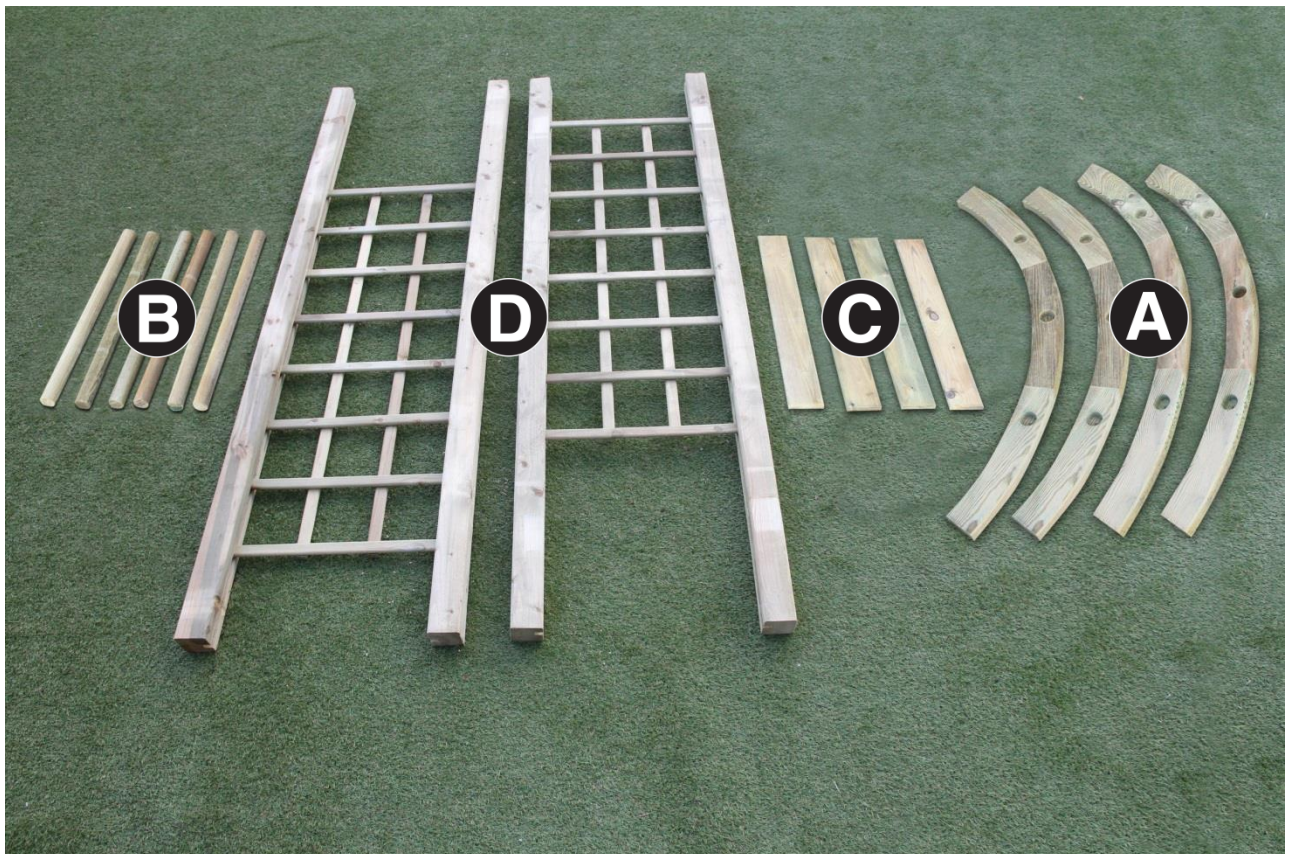

Please take a few moments to check all pack contents listed.

Assembly requires 2 persons

Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, Tape Measure, 3mm Drill Bit required in order for you to drill all screw holes before construction.

1. Insert 3no. Dowel Rods B into Arch Section A (Fig 1a). Locate further Arch Section A onto Dowel Rods B and tap into position (Figs 1b & 1c).

Repeat procedure for remaining Dowel Rods B & Arch Sections A

2. Attach 1no. Board C to each end of arch assemblies using 16no. 50mm Screws – 4no per board (Fig 2a).


With arch assemblies positioned as shown in Fig 2b, fix together using 6no. 25mm screws (Fig 2b).

3. Ensuring correct orientation of Post Assembly D (see Fig 3a), position centrally to underside of arch assembly and fix using 4no 50mm Screws – 2no per post (Figs.3a & 3b).


Repeat procedure for remaining Post Assembly D.

Katja Arch is now complete.


1a

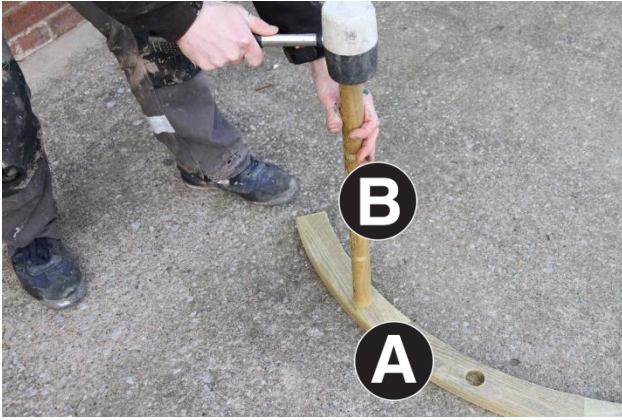


1b

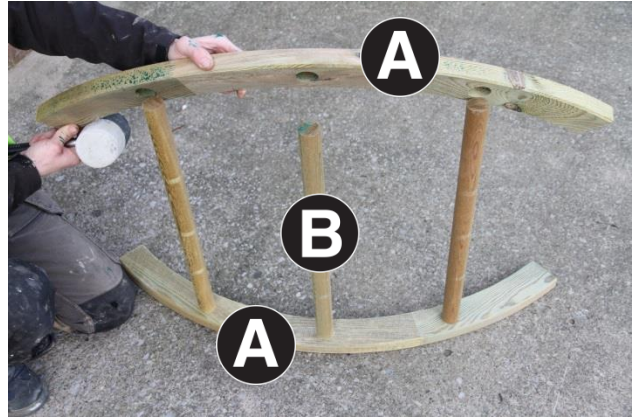


1c

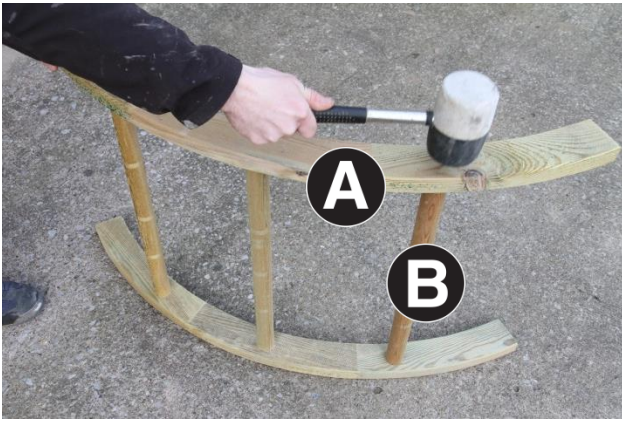


2a

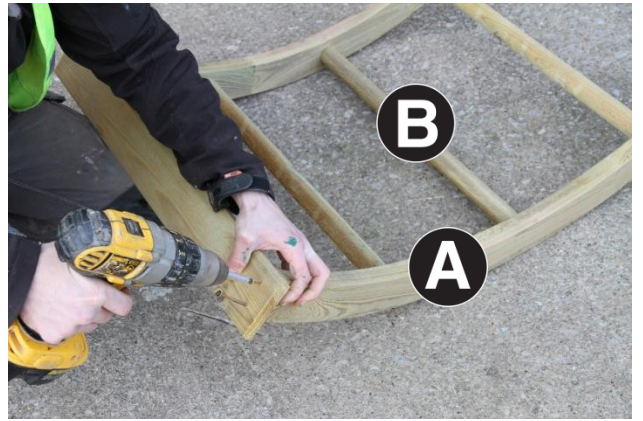


2b

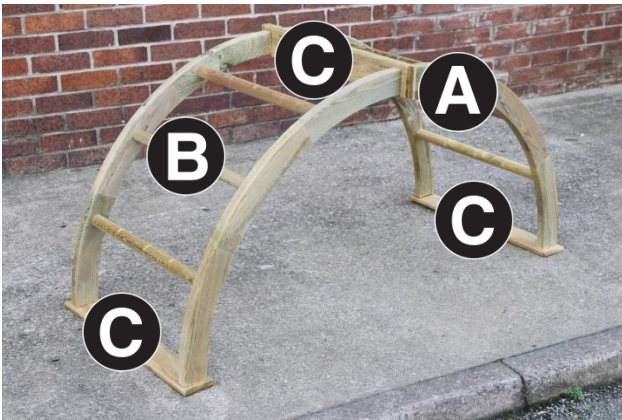

2c

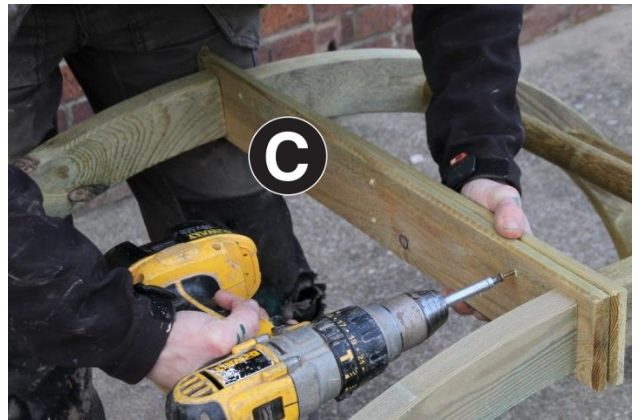

3a

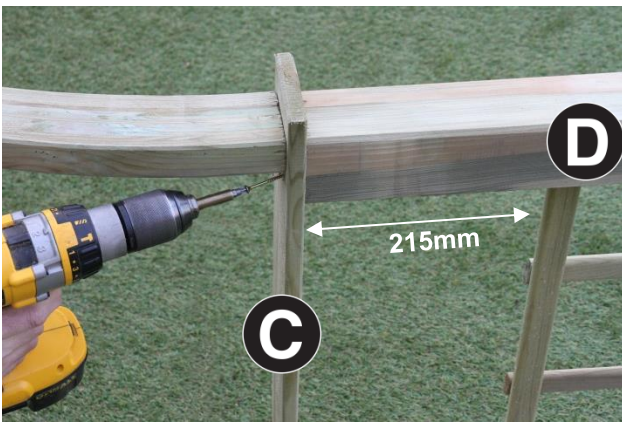

3b

