
V3-10.15



## **Assembly Instructions**

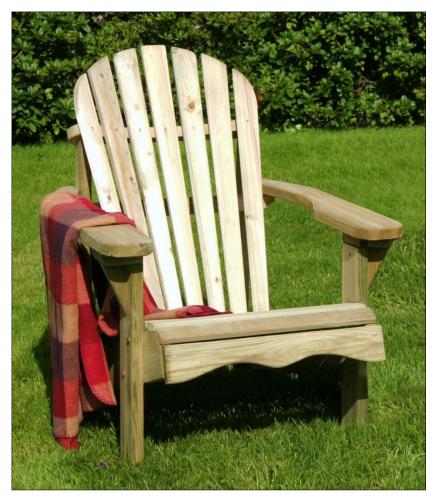

(W x D x H) 0.72m x 0.92m x 0.92m Product Name: Lily Relax Seat

Pressure Treated products should not be treated with any other products for the first month.

## PLEASE KEEP THESE INSTRUCTIONS


## **Lily Relax Seat Assembly Instructions**

Requires 2 person assembly

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, 3mm Drill Bit, 4mm Hex Key.

Lily Relax Seat Pack List			
Item	Description	Quantity	
А	Back Support Assembly	1	
В	Seat Assembly	1	
С	Back Assembly	1	
D1/D2	Armrest/Leg Assembly	2	

Fixings		
50mm Screws	8	
Hex Bolts	6	
'T' Nuts	6	

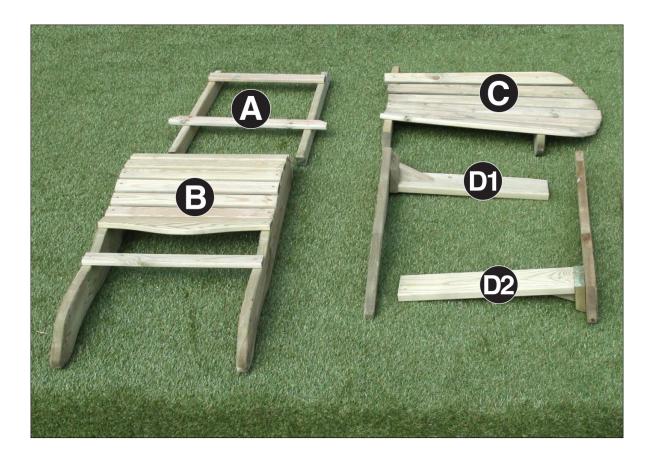

Please take a few moments to check all pack contents listed.

Assembly requires 2 persons.

Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, 4mm Hex Key.

3mm Drill Bit required in order for you to drill all screw holes before construction.

1. Insert Back Assembly A between rear legs of Seat Assembly B, align bolt holes and insert 2no Hex Bolts and 'T' Nuts. See Figs. 1a, 1b & 1c.

Do not fully tighten at this stage.


- Locate Back Assembly C as shown in Fig 2a and fix in position using 6no Screws. See Figs 2b & 2c.
- 3. Position Armrest/Leg Assembly D1 as shown in Fig.3a. Align bolt holes and insert 2no Hex Bolts and 'T' Nuts. See Fig. 3b. Do not fully tighten.

Attach Armrest/Leg Assembly D1 to Back Support Assembly A using 1no Screw. See Fig.3c.

Repeat procedure for Armrest/Leg Assembly D2.

## Fully tighten all bolts at this stage.


1a

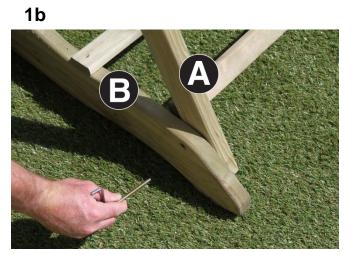


1c




2a

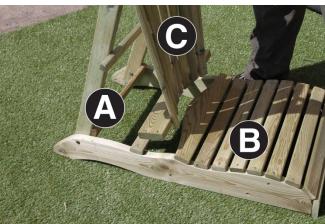


2b

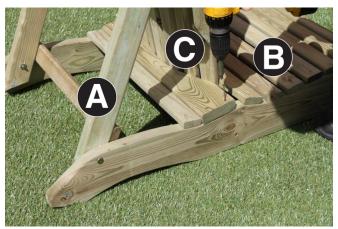


2c

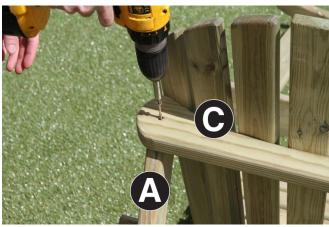

3a

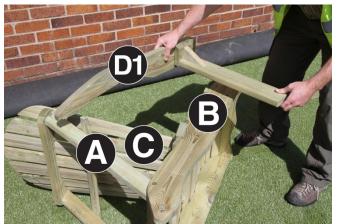

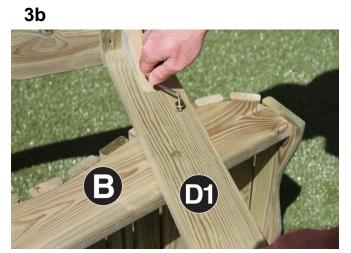

3c

