

Assembly Instructions



(WxDxH) 1.80m x 0.40m x 1.5m
Product Name: Oxford Planter

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS

Zest4Leisure
01352 752555 option 1 – sales@zest4leisure.co.uk


Oxford Planter Assembly Instructions

Requires 2 person assembly.

Tools required: Corded/Cordless Drill, Pozidrive Bit/Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.

Oxford Planter Pack List		
Item	Description	Quantity
A	Front panel	1
B	Side Panel	2
C	Back Panel	1
D	Base Panel	1

Fixings		
	50mm Screws	6
	90mm Screws	8

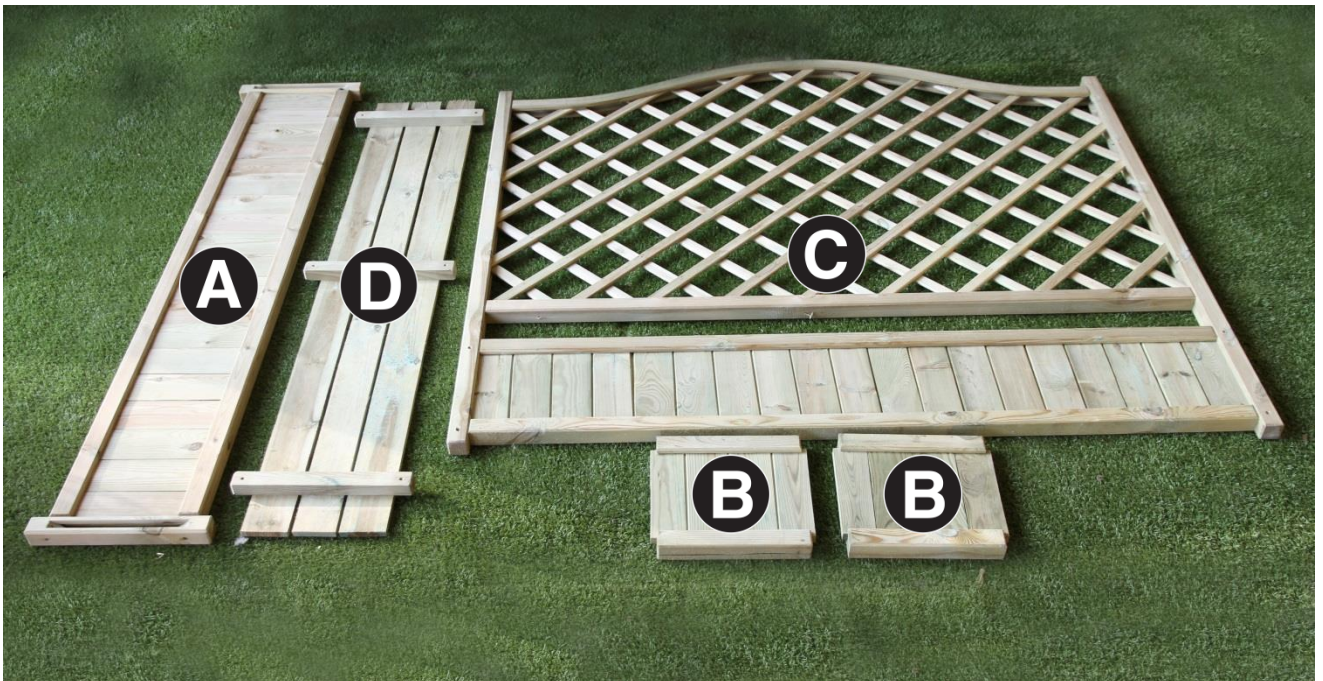

Please take a few moments to check all pack contents listed on page 1 of the Assembly Instructions.


Assembly requires 2 persons.

Tools required: Corded/Cordless Drill, Pozidrive Bit/Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.


- 1. Locate Side Panels (B) into slots in Front Panel (A). Fix in position using 4no 90mm screws. See Fig 1a & 1b.**
- 2. Locate Back Panel (C) onto side panels (B) and fix in position using 4no 90mm screws. See Fig 2a & 2b.**
- 3. Position Base Panel (D) as shown in Fig 3a and fix through battens using 6no 50mm screws. See Fig 3a & 3b.**

Oxford Planter is now complete.


1a

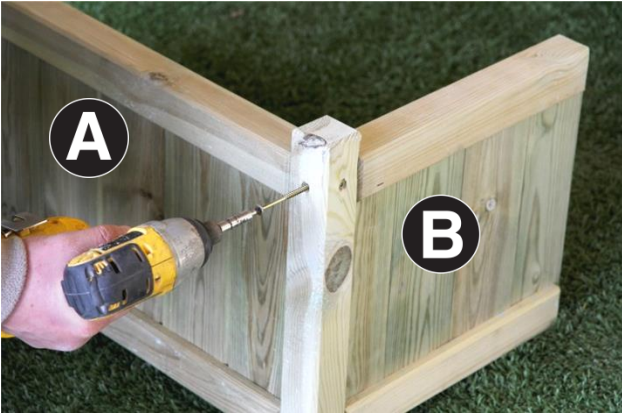

1b

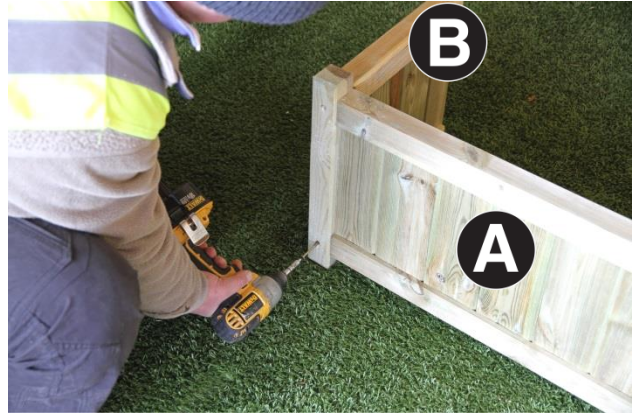


2a

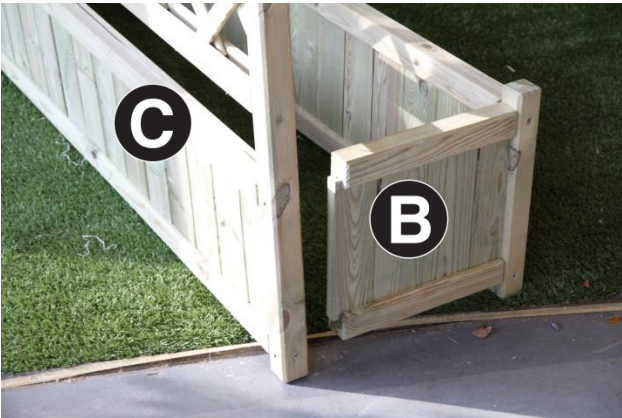

2b



3a

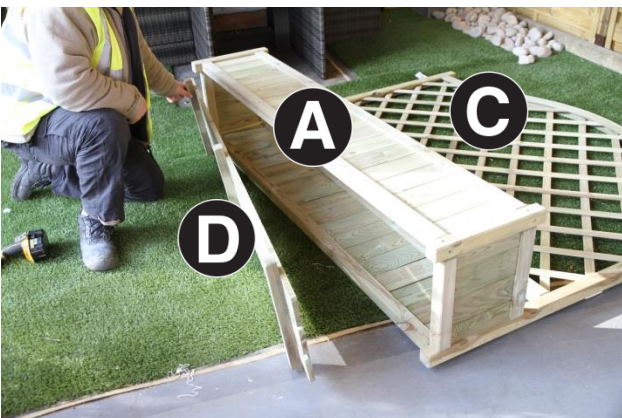

3b

