



Assembly Instructions



(W x D x H): 1.88m x 0.66m x 0.31m
Product Name: Palma Sun Lounger

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THIS INSTRUCTION

Zest4Leisure
01352 752555 option 1 – sales@zest4leisure.co.uk

Palma Sun Lounger Assembly Instructions


Requires 2 person assembly.

Tools required: Corded / Cordless Drill, Hex Bit / Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.

The colour version of this document can be downloaded from:
www.zest4leisure.co.uk/downloads/category/C1

Palma Sun Lounger Pack List		
Item	Description	Quantity
A	Back Leg	2
B	Front Wheel	2
C	Sun Bed	1

Fixings		
	Hex Screws	8

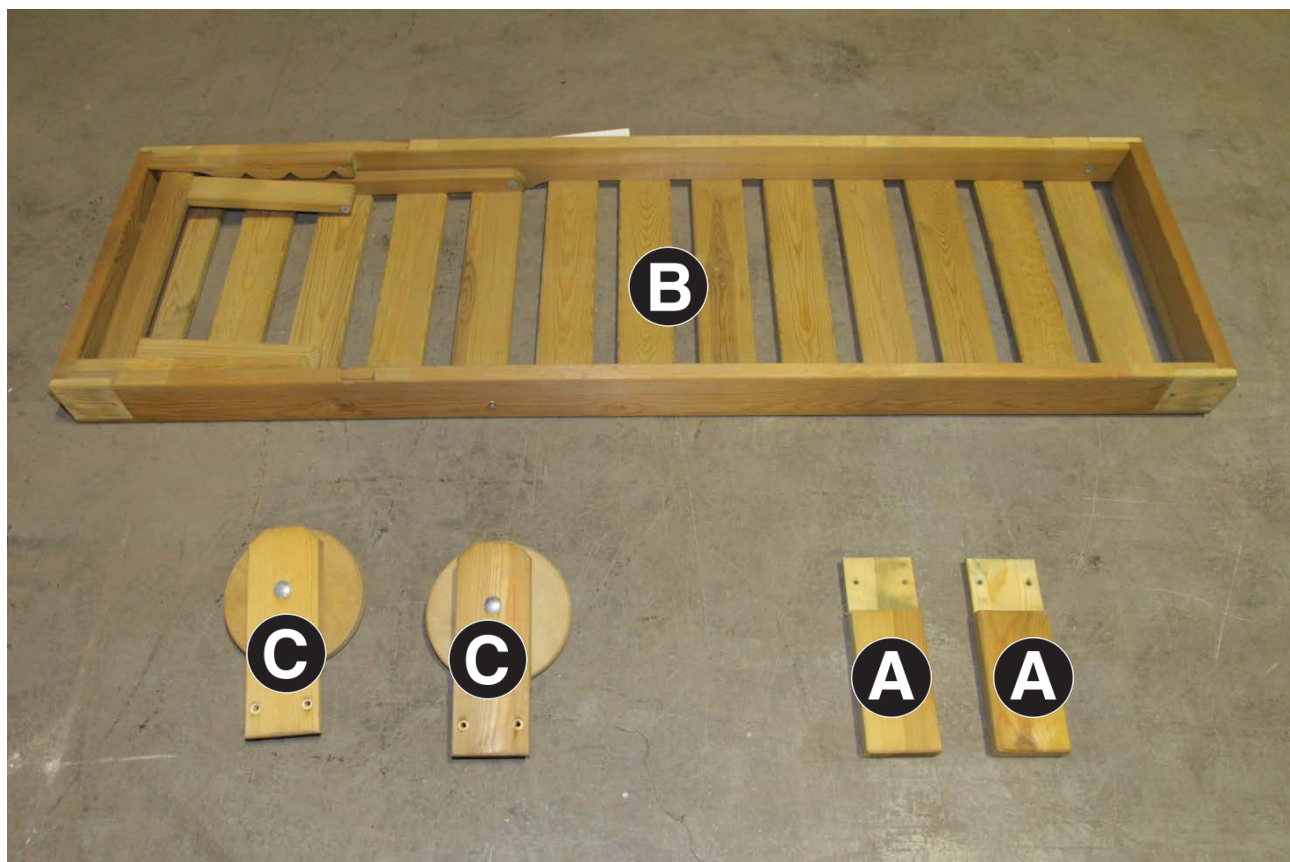


Please take a few moments to check all pack contents listed.


Assembly requires 2 persons.

Tools required: Corded/Cordless Drill, Hex Bit/Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.

1a

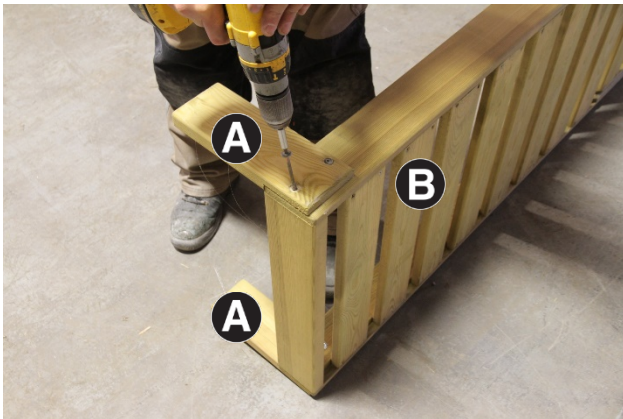

1b

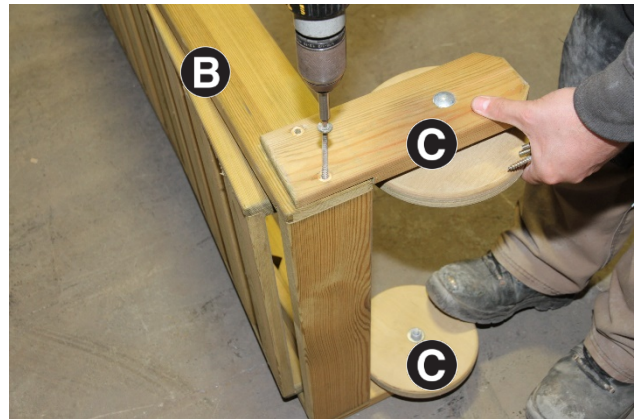

1. Attach Back Legs A to Sun Bed B as shown in Fig.1a using 4no Hex Screws – 2no per Back Leg A.
2. Attach Front Wheels C to Sun Bed B as shown in Fig.1b using 4no Hex Screws – 2no per Front Wheel C.

Palma Sun Lounger is now complete.