

Assembly Instructions



(W x D x H) 1.619m x 1.308m x 2.15m
Product Name: Salisbury Corner Seat

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS

Zest4Leisure
01352 752555 option 1 – sales@zest4leisure.co.uk


Salisbury Corner Seat Assembly Instructions

Requires 2 person assembly.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, Tape Measure.
3mm Drill Bit required in order for you to drill all screw holes before construction.

Salisbury Corner Seat Pack List		
Item	Description	Quantity
A	Seat Support	2
B	Post/Trellis Assembly	2
C	Seat	1
D	Fascia	1
E1,E2	Long Rafter, Short Rafter	2
F	Rail	1
G	Bracing Rail	1
H	Slotted Rafters (LH, RH & C)	3

Fixings		
	120mm Screws	4
	90mm Screws	4
	60mm Screws	22
	40mm Screws	31

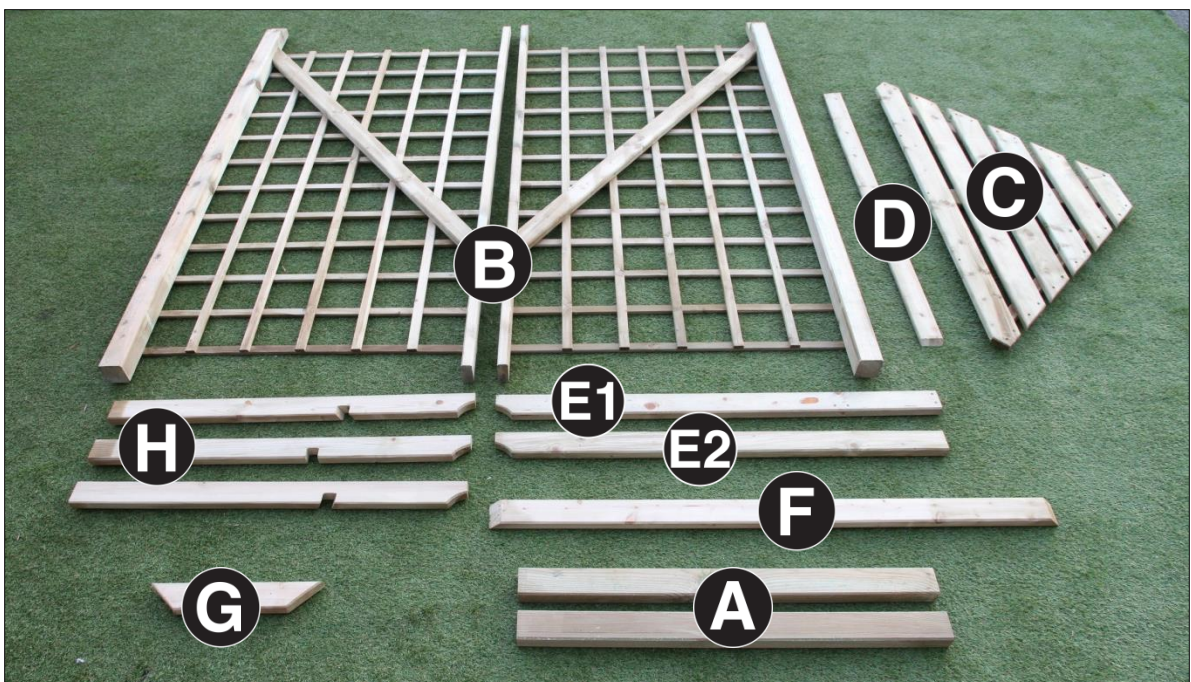

Please take a few moments to check all pack contents listed.

Assembly requires 2 persons.

**Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, Tape Measure
3mm Drill Bit required in order for you to drill all screw holes before
construction.**

1. Position Seat Support A between posts at a height of 400mm (nom.) from base of posts. Fix in position using 2no 90mm Screws (Fig.1a) and 2no 120mm Screws (Fig.1b).

Repeat procedure for remaining Seat Support A and Post/Trellis Assembly B.

2. Position Seat C and Post/Trellis Assemblies B as shown in Fig.2a (ensuring narrower posts are rearmost). Attach Seat C to Seat Supports A using 24no 40mm Screws – 12no per side.

Attach Fascia D to Seat Supports A using 4no 40mm Screws – 2no per side (Fig.2b)

Attach Seat C to Fascia D using 3no 40mm Screws (Fig.2c).

3. Ensuring scalloped ends are faced downwards, attach Long Rafter E1 to Short Rafter E2 using 2no 60mm Screws (Fig.3a).

Position Rail F as shown in Fig.3b and attach to both Rafters E1 & E2 using 4no 60mm Screws.


Attach Bracing Rail G to Rafters E1 & E2 using 4no 60mm Screws, ensuring underside of rail is flush with underside of rafters (Fig.3c).

Ensuring correct orientation of Slotted Rafters H, equispace and fix to Rail F using 3no 60mm Screws (Fig.3d). Invert rafter assembly and attach rafter ends to Bracing Rail using 3no 60mm Screws (Fig.3e)


4. Locate rafter assembly onto notched post tops and fix in position through posts using 2no 60mm Screws per front post (Fig.4a) and 1no 60mm Screw per rear post (Fig.4b)

Salisbury Corner Seat is now complete.


1a

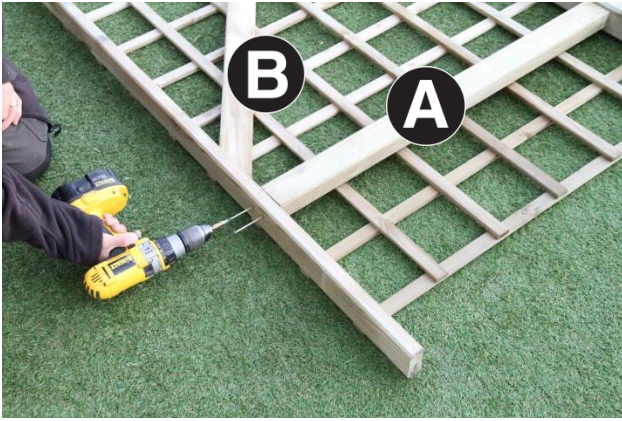

1b

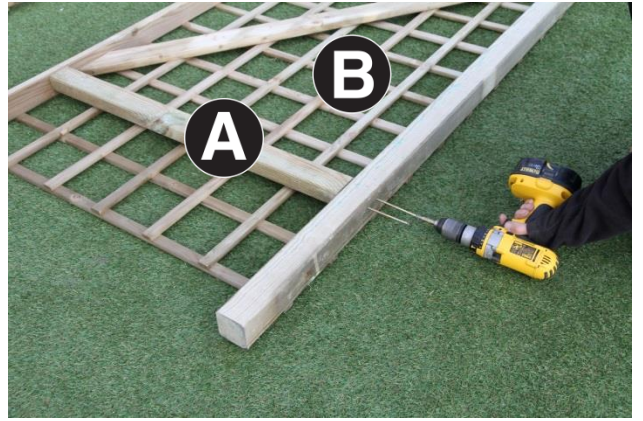


2a

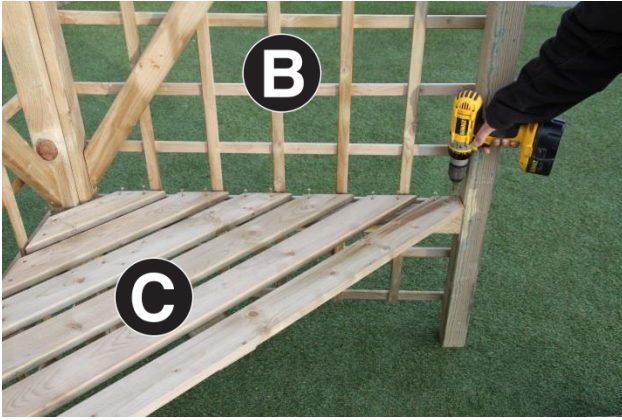

2b




2c

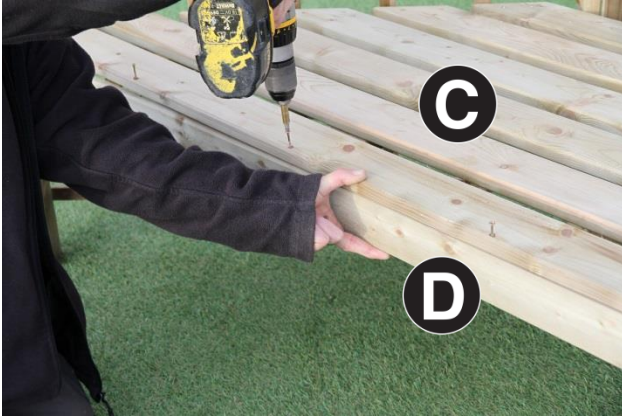


3a




3b

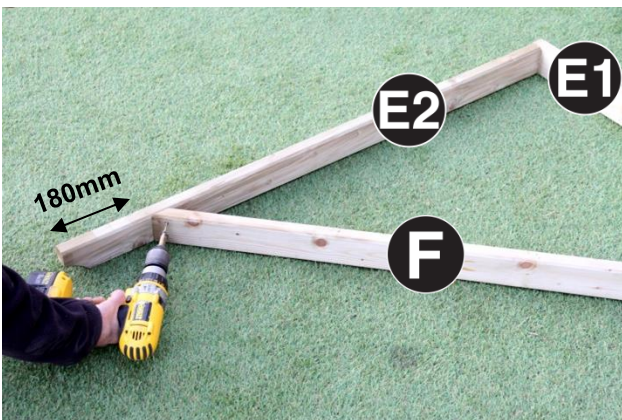


3c

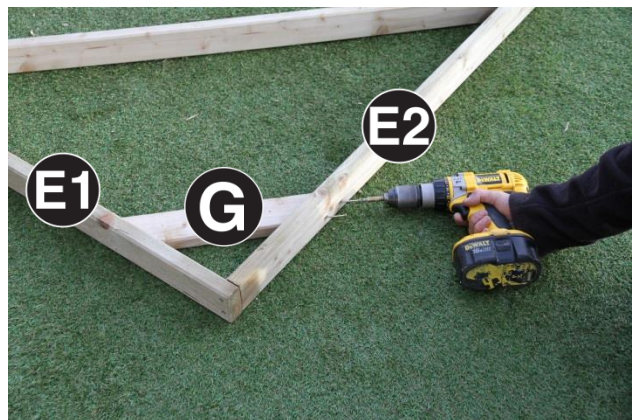

3d

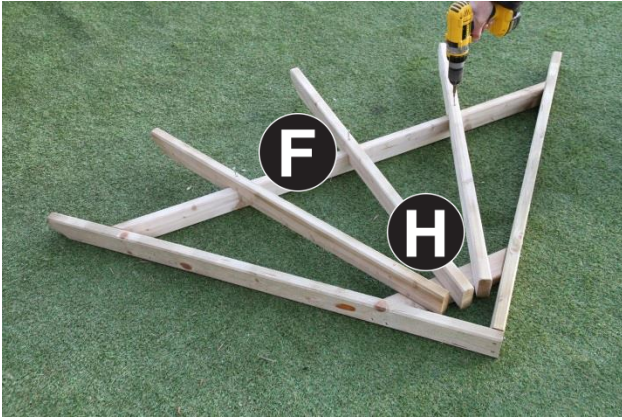

3e

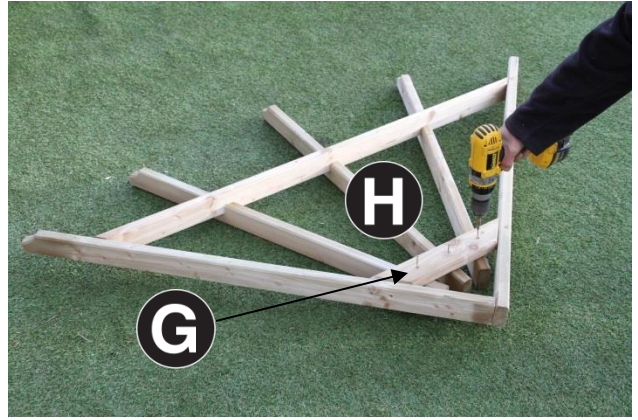

4a



4b

