



Assembly Instructions



(W x D x H): 1.70m x 0.60m x 0.43m/0.32m

Product Name: Sleeper Cold Frame

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THIS INSTRUCTION

Zest4Leisure

01352 752555 option 1 – sales@zest4leisure.co.uk


Sleeper Cold Frame Assembly Instructions

Requires 2 person assembly.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.

The colour version of this document can be downloaded from:
www.zest4leisure.co.uk/downloads/category/C1

Sleeper Cold Frame Pack List		
Item	Description	Quantity
A1/A2	Side Panel	2
B	Front Panel	1
C	Back Panel	1
D	Window Support	2
E	Hinged Window	2
Fixings		
	50mm Screws	12
	25mm Screws	12

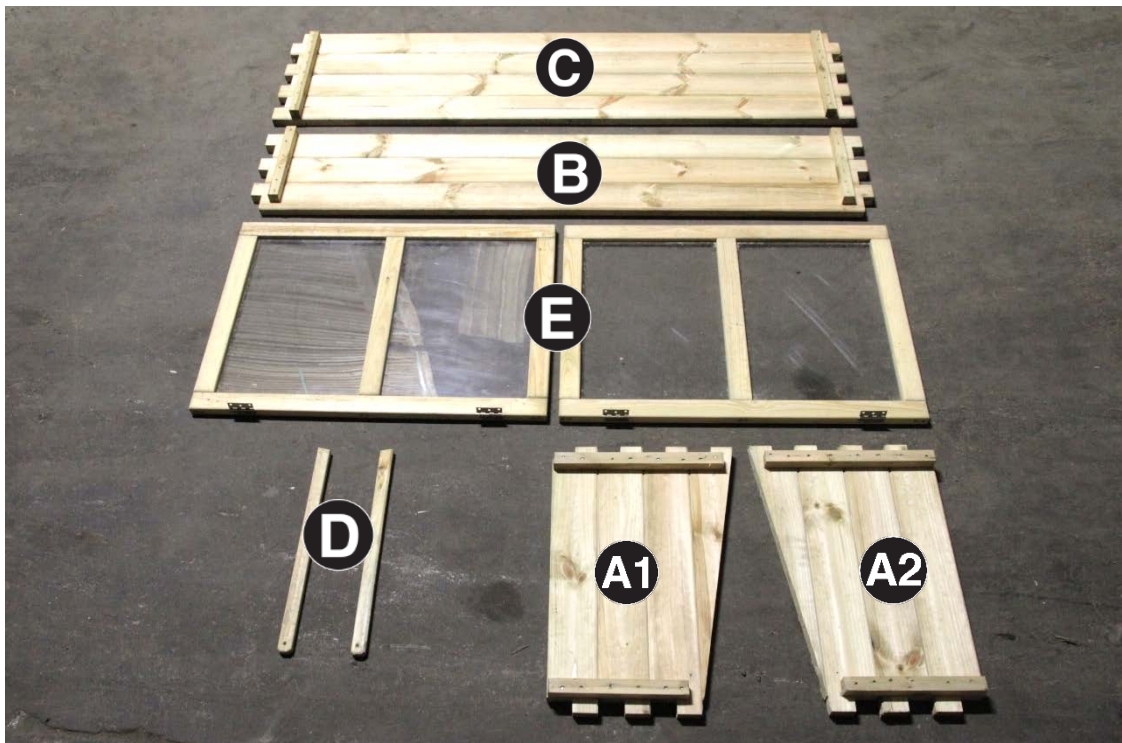


Please take a few moments to check all pack contents listed.


Assembly requires 2 persons.

Tools required: Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, 3mm Drill Bit required in order for you to drill all screw holes before construction.


1a

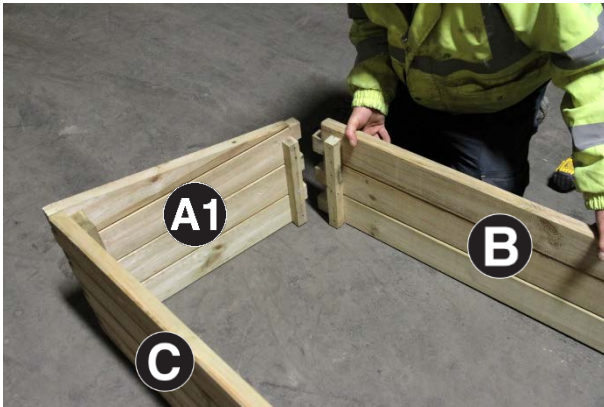


1b

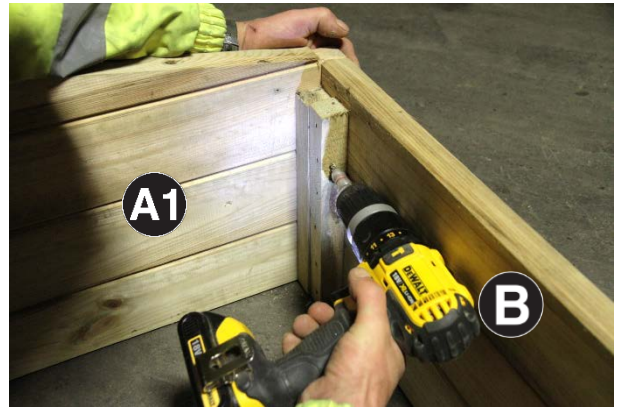

2

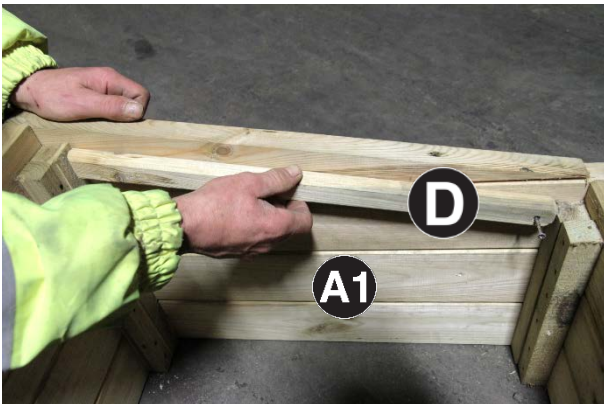

3

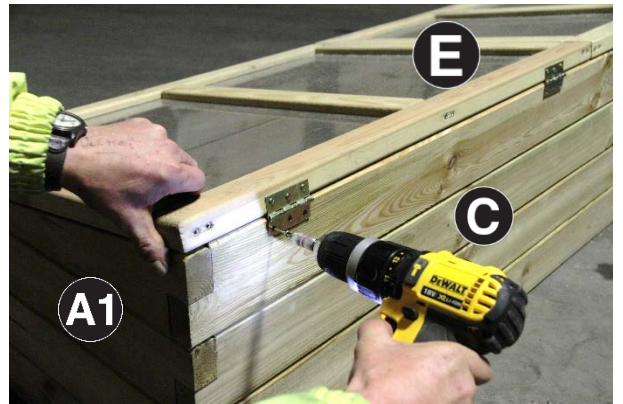

1. Attach Side Panel A1 to Front Panel B and Back Panel C using 5no 50mm Screws – 2no per Front Panel B and 3no per Back Panel C (Figs.1a & 1b). Repeat procedure for remaining Side Panel A2.
2. Attach Window Support D to Side Panel A1 using 1no 50mm Screw (Fig.2). Similarly fix remaining Window Support D to Side Panel A2.
3. Attach Hinged Windows E to Back Panel C as shown in Fig.3 using 12no 25mm Screws, 3no per hinge.

Sleeper Cold Frame is now complete.